



HEARTH PRODUCTS

HEARTH PRODUCTS
KITS AND ACCESSORIES

506019-30
REV. N/C 04/2009

MLDVTCD-35
CRUSHED GLASS

INSTALLATION INSTRUCTIONS FOR THE MLDVTCD-35 CRUSHED GLASS CONTEMPORARY MEDIA

Table Of Contemporary Media

Catalog Number	Model Number	Contemporary Media Name
H7537	MCCG-OB	Contemporary Glass Obsidian Black
H7578	MCCG-DW	Contemporary Glass Diamond White
H7579	MCCG-SB	Contemporary Glass Deep Sea Blue

WARNING: Only use materials listed here. Only contemporary media authorized have been tested for use within the firebox and its environment. Do not attempt to use any different materials in the fireplace. Doing so may be dangerous and will void the warranty and will result in incomplete combustion, sooting, and poor flame quality.

TOOLS REQUIRED - None.

GENERAL INFORMATION

The Crushed Glass Contemporary Media is to be used as a decorative addition to the MLDVTCD-35 fireplace. **Please read this instruction sheet in its entirety before applying this Contemporary Media.**

ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

Refer to the appliance Care And Operations manual (P/N 506017-01) for detailed instructions.

TURN OFF THE FIREPLACE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

CAUTION: TURN OFF GAS TO THE APPLIANCE AND LOCK OUT ANY ELECTRICAL SWITCHES.

REMOVING THE GLASS DOOR

WARNING: Handle this glass with extreme care! Tempered glass is susceptible to damage – do not scratch or handle roughly while removing or installing the glass door.

1. To access the glass door securing latches, first open the lower control compartment door by sliding and pulling the bottom panel forward.
2. Pull the latches forward and down to release them from the door channel.
3. Pull the bottom of the door out a few inches and grasp it on the right and left. Gently lift to release the door from its channel above the door. Pull the door forward.

INSTALLING THE CONTEMPORARY MEDIA


Install Crushed Glass (MCCG) -

IMPORTANT: Refractory panels should be installed before any of the contemporary media are installed.

1. Pour out the glass (of which there are three varieties - refer to the **Table of Contemporary Media**) on firebox sub-floor, completely covering the sub-floor. See **Figure 1** for an example.

IMPORTANT: Avoid letting glass fall into the burner outlet. Make sure no glass falls into the burner ports.

WARNING: If contemporary media are not installed according to the installation instructions, flame impingement and improper combustion could occur and result in soot and/or excessive production of carbon monoxide (CO), a colorless, odorless, toxic gas.

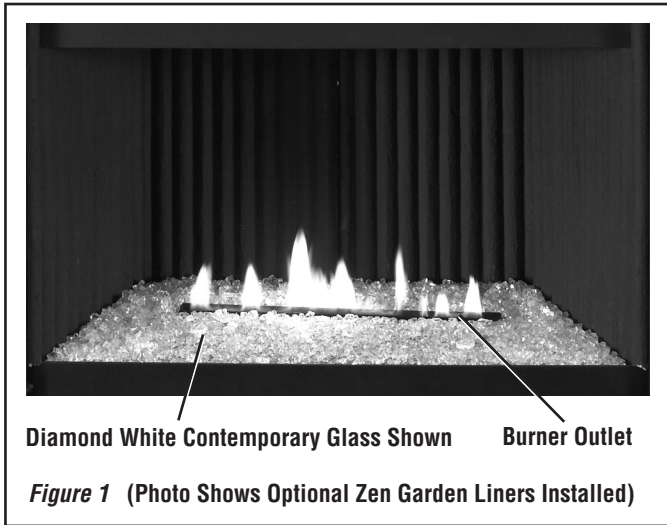

Re-Installing The Glass Door

1. Retrieve the glass door. Visually inspect the gasket on the backside of the frame. Gasket surface must be clean, free of irregularities and seated firmly.
2. Position the door in front of the firebox opening with the bottom of the door held away from the fireplace. Hook the top flange of the door frame over the top of the firebox frame.
3. Let the bottom of the door frame swing gently in towards the fireplace ensuring that the gasket seats evenly as the door frame draws shut. Fasten the two latches located underneath the firebox floor to the door's vee-flange. Close both the latches securely.
4. Turn on the gas. Restore electrical power.

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.